



Husky

Recommended Installation, Maintenance
and Inspection Instructions

**NOZZLE
SPOUTS**

Nozzle Spout Assemblies

001471	003358	005215	012263	014378	015427
001473	004889	006207	013163	014420	
003356	005042	010432	014376	014421	

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION.



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov



WARNING! *Only properly trained personnel should replace nozzle spout assemblies.*

INSTALLATION INSTRUCTIONS

1. Turn off dispenser and relieve line pressure.
2. Remove nozzle from the hose and drain fuel into approved container.
3. Remove spout lock nut.
4. Remove spout by gently pulling and twisting.
5. Remove old spout seal.
6. Place new spout seal in nozzle body and push inward until seal is seated in the groove.
7. Install new spout onto the nozzle body making sure the vent tube is in the spout housing port.
8. While holding the spout in proper alignment, tighten the spout lock nut firmly, approximately 35 - 60 lbf•ft / 47 - 81 N•m. Do not overtighten.
9. Reinstall nozzle according to manufacturers installation and maintenance instructions provided with the nozzle.

DO NOT OVERTIGHTEN SPOUT LOCK NUT.

IF DRIVE OFF OCCURS

- Turn off dispenser and relieve line pressure.
- Inspect entire dispensing system for damage.
- Visually check for fractured spout shear groove.
- Visually check spout for overall damage.
- Check for leaks.
- Check spout tip - should be in round and sensing port should be clear of debris.

TESTING / MAINTENANCE / INSPECTION



Daily
• Check for loose spouts.



Monthly
• Check spout tip - should be in round and sensing port should be clear of debris.



Annually
• Check "remove after" date on the nozzle.

- All drive aways, maintenance and inspection activities must be logged using the serial number of the individual product.
- Apply city, state, or federal testing regulations as appropriate.

**ANY TEST / INSPECTION FAILURE
REQUIRES IMMEDIATE EQUIPMENT
REPLACEMENT OR REMOVAL FROM
SERVICE.
MADE IN THE USA**



ALWAYS ADHERE TO INSTALLATION / USAGE INSTRUCTIONS AND WARNINGS.

Improper use may result in injury, damage, or hazardous spill.



GENERAL WARNINGS / INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:



- Use of equipment is at individuals' own risk.
- Always abide and adhere to city, state, and federal regulations regarding use and installation of dispensing equipment.
- Always follow the product manufacturer's installation & maintenance instructions.



- Always turn off all power to dispenser during maintenance and inspection activities.
- Always close the shear valves during maintenance and inspection activities.
- Always relieve pressure from system prior to performing maintenance activities.



- Always check continuity after installation using a megohmmeter (Refer to PEI RP 400 for details).
- Always replace or remove from service damaged or leaking dispensing equipment immediately.



- Always report leaks / spills / accidents to appropriate authorities.
- Always wear appropriate safety equipment during maintenance activities.



- Always have appropriate fire extinguishing equipment within 5 ft / 1.5 m of dispensers.
- Always use pipe sealant approved for gasoline service.



- Always use pipe sealant approved for gasoline service.



- Always place containers on the ground before filling.



- Always discharge static electricity before using or servicing equipment by touching a metal part of the dispenser before and after fueling vehicle.



- Never smoke within 20 ft / 6.1 m of dispensers.



- Never keep in service past recommended life.
- Never leave the nozzle unattended while dispensing fuel.



- Never use sparking or flaming devices within 20 ft / 6.1 m of dispensers.
- Never use power tools near dispensers or to aid in the installation process.



- Never use cell phone within 20 ft / 6.1 m of dispensers.
- Never reenter car when fueling vehicle.



- Never allow gasoline to touch eyes or skin.



- Never use at flow rates in excess of regulatory guidelines.



- Never use at flow rates less than 5 gpm / 18.9 Lpm.

- Never dispense flammable material into unapproved containers.

- Never dispense fuel without a valid driver's license.

CAUTION: DO NOT OVERTIGHTEN SPOUT LOCK NUT!

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION.

WARRANTY

VAPOR PRODUCTS – Husky Corporation will, at its option, repair, replace, or credit the purchase price of any Husky[®] manufactured product which proves upon examination by Husky, to be defective in material and/or workmanship for a period of one (1) year of installation or fifteen (15) months from the manufacture date of shipment by Husky, whichever occurs first. The warranty period on repaired or replacement vapor recovery products is only for the remainder of the warranty period of the defective product.

CONVENTIONAL PRODUCTS – Husky Corporation will, at its option, repair, replace, or credit the purchase price of any Husky manufactured product which proves upon examination by Husky, to be defective in material and/or workmanship for a period of one (1) year from the manufacture date of shipment by Husky.

Buyer must return the products to Husky, transportation charges prepaid. This Warranty excludes the replaceable bellows, bellows spring assembly, spout assembly and scuff guard, unless (i) damage is obvious when the product is removed from shipping carton and (ii) the defective product is returned to Husky prior to use. This Warranty does not apply to equipment or parts which have been installed improperly, damaged by misuse, improper operation or maintenance, or which are altered or repaired in any way.

The Warranty provisions contained herein apply only to original purchasers who use the equipment for commercial or industrial purposes. There are no other warranties of merchantability, fitness for a particular purpose, or otherwise, and any other such warranties are hereby specifically disclaimed.

Husky assumes no liability for labor charges or other costs incurred by Buyer incidental to the service, adjustment, repair, return, removal or replacement of products. Husky assumes no liability for any incidental, consequential, or other damages under any warranty, express or implied, and all such liability is hereby expressly excluded.

Husky reserves the right to change or improve the design of any Husky fuel dispensing equipment without assuming any obligations to modify any fuel dispensing equipment previously manufactured.