


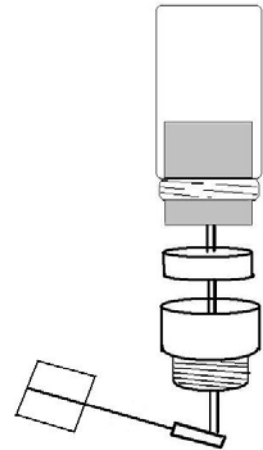

JARHEAD TANK GAUGE

Installation Instructions

- 1. Remove Glass Jar.**
- 2. Remove Linkage Assembly from Threaded Adaptor.**
- 3. Apply Appropriate Sealer to Adaptor Threads.**
- 4. Screw Threaded Adaptor into Tank Bung.**
- 5. Re-Install Linkage Assembly Using Slot in Top of Disk as a Guide to Assure Float Arm Will Clear Side of Tank or Baffles.**
- 6. Screw Glass Jar into Threaded Adaptor.**



WARRANTY

- Every item is warranted to be in good working order for the original purchaser for one year.
- All freight charges to and from the factory are the responsibility of the user.
- The warranty does not cover: Damages due to malfunctions of equipment; Failure to follow manufacturer's installation, operation or maintenance instructions and guidelines; Unauthorized adjustments, modifications or alterations of the equipment; Replacement of factory parts with parts other than original equipment; Abuse, misuse or negligent acts; Acts of God and or third parties.
- The warranty shall begin on the day the equipment is shipped to the customer. Customers requiring warranty assistance must contact manufacturer for a returned goods authorization number. Manufacturer will determine the method of satisfying the warranty requirements. If it is determined that the product must be returned, proof of purchase and a clear description of the problem must accompany the equipment. The product must be returned freight prepaid. The manufacturer shall not be responsible for any losses (including loss of profits or revenues) incurred by the purchaser during the time necessary to repair the equipment. The manufacturer's sole responsibility shall be to repair or replace the product and not the cost of removal or reinstallation. No other warranty except as stated above is implied or expressed.
- BJ Enterprises will not assume any responsibilities for spills, cleanup, shortages or any other damages resulting from malfunction of this product.